

sloper.fit -- CALIBRATION TEST SHEET & PATTERN OVERVIEW

GARMENT: WOMEN'S CLASSIC TROUSER BLOCK UK 10 | PROFILE: UK 10 / US 6 / EU 38 (Sample / M)) | SEM ALLOWANCE: 15mm




PHYSICAL SCALE VERIFICATION INSTRUCTIONS FOR SEWERS


- 1. Printer Setup:** Print this Page 1 alone. In your printer dialogue, set Page Scaling to "Actual Size" or "100%". Turn OFF "Fit to Printable Area" or "Shrink oversized pages".
- 2. Ruler Check:** Measure the outer black box above with a physical millimeter ruler. It must measure exactly 100 mm x 100 mm (10.0 cm / 3.94 in). If off by even 1-2mm, the garment will fit incorrectly.
- 3. Print Pattern:** Once 100mm scale is verified, proceed to print Sheets 2 through 37 (the 9 x 4 pattern tile grid).


PATTERN TILE ASSEMBLY GRID (9 COLUMNS x 4 ROWS = 36 TILES)


Trim right and bottom border lines along dashed cutlines. Align corner crosshairs and tape sheets together in numerical sequence:


p.2	p.3	p.4	p.5	p.6	p.7	p.8	p.9	p.10
p.11	p.12	p.13	p.14	p.15	p.16	p.17	p.18	p.19
p.20	p.21	p.22	p.23	p.24	p.25	p.26	p.27	p.28
p.29	p.30	p.31	p.32	p.33	p.34	p.35	p.36	p.37

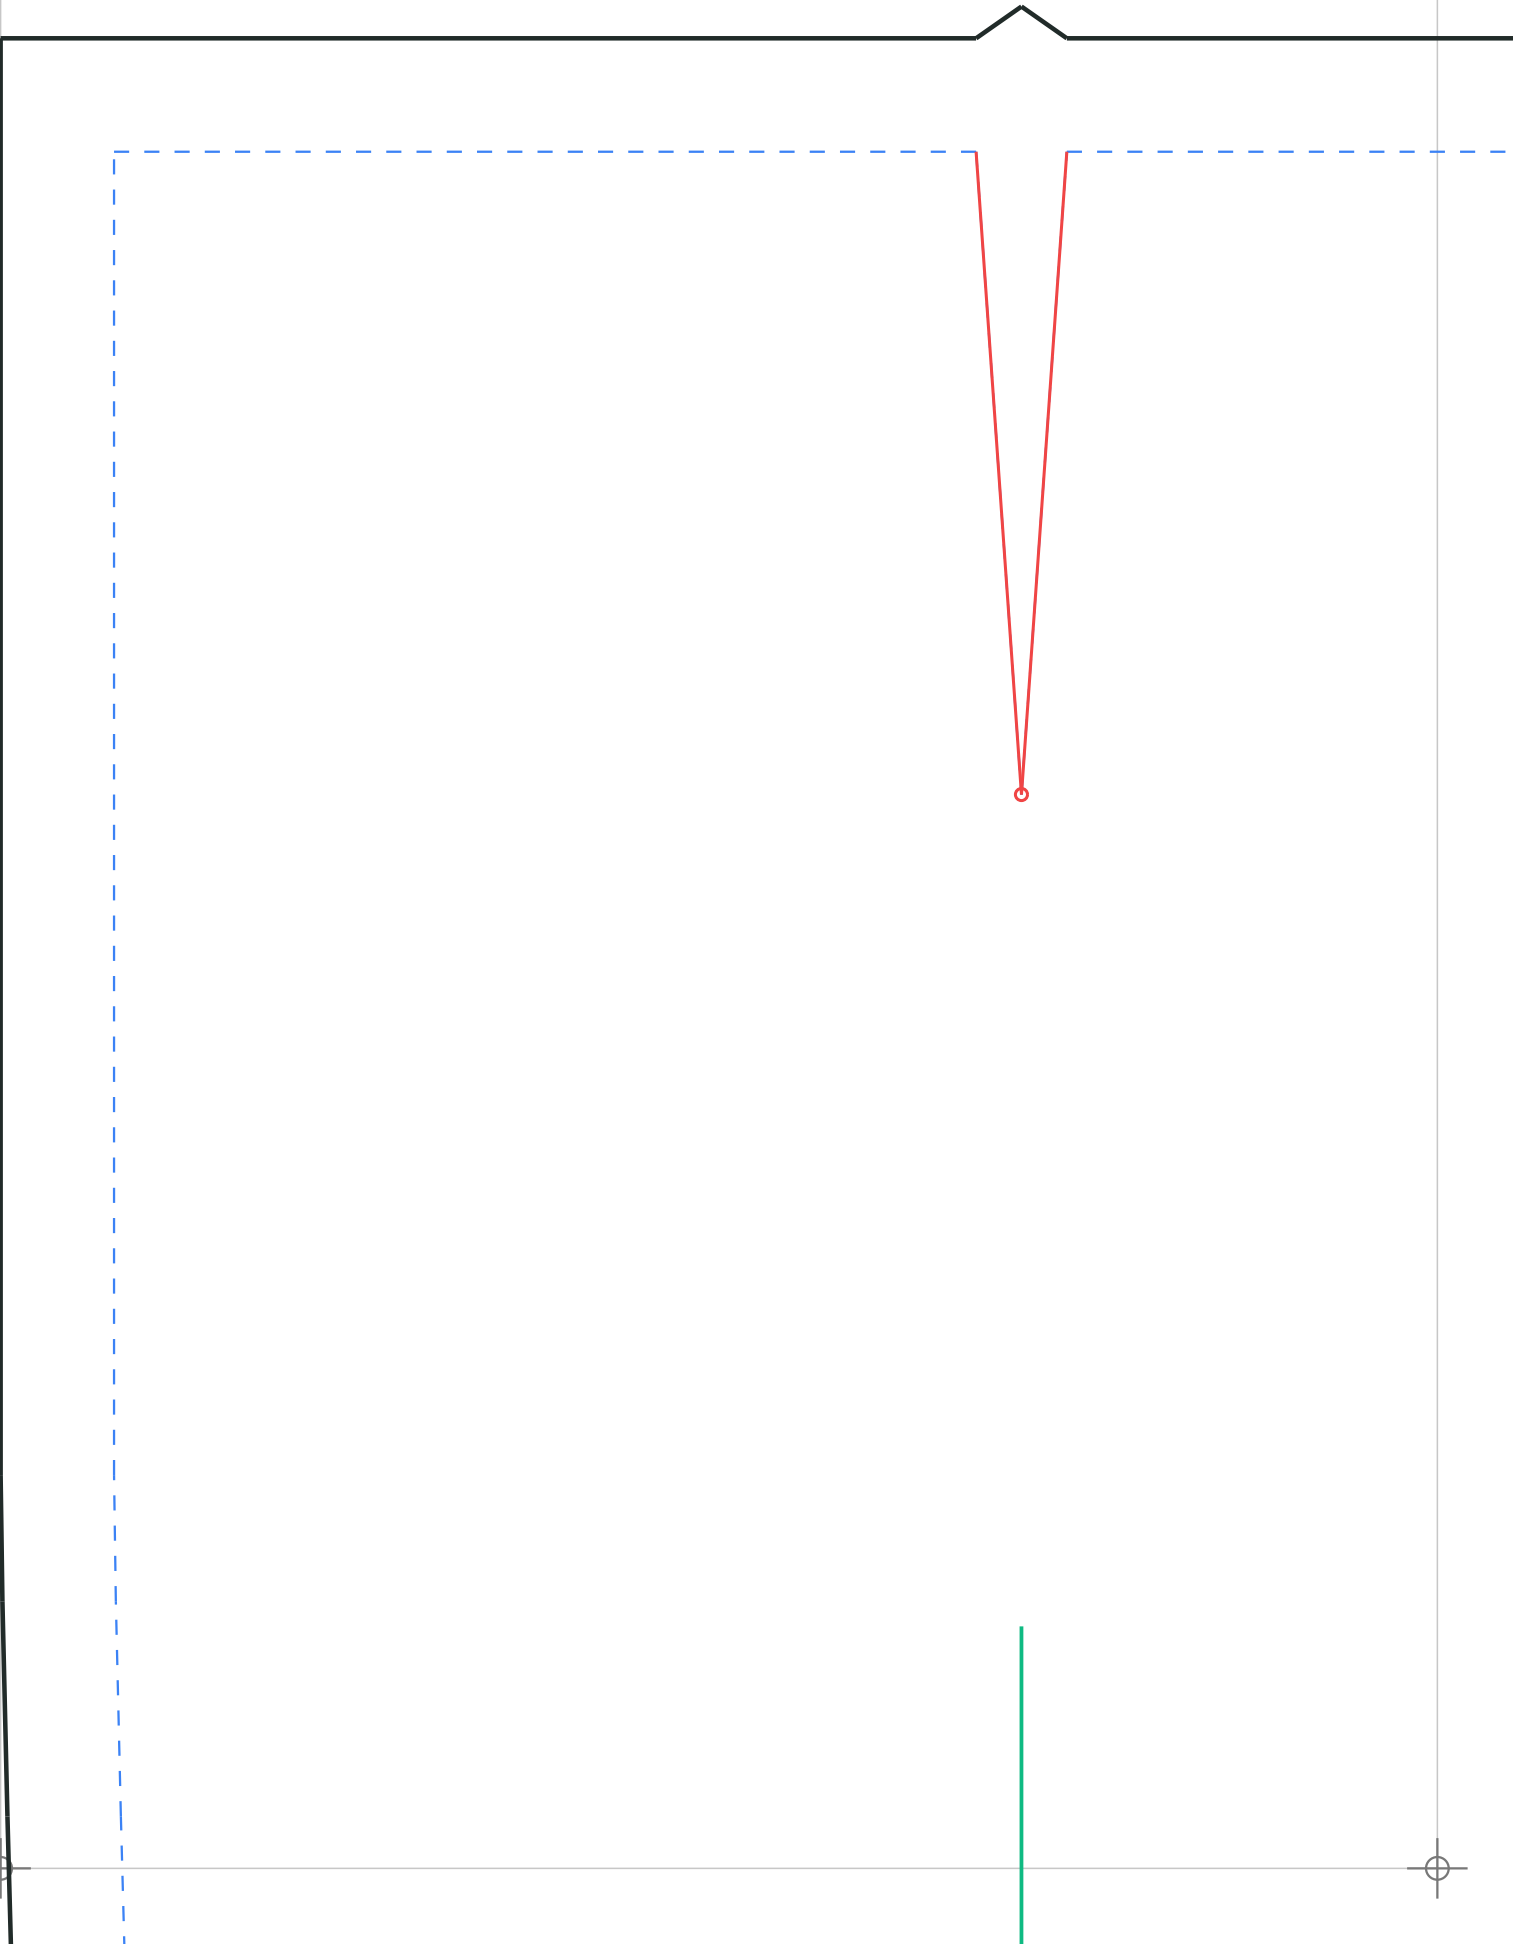

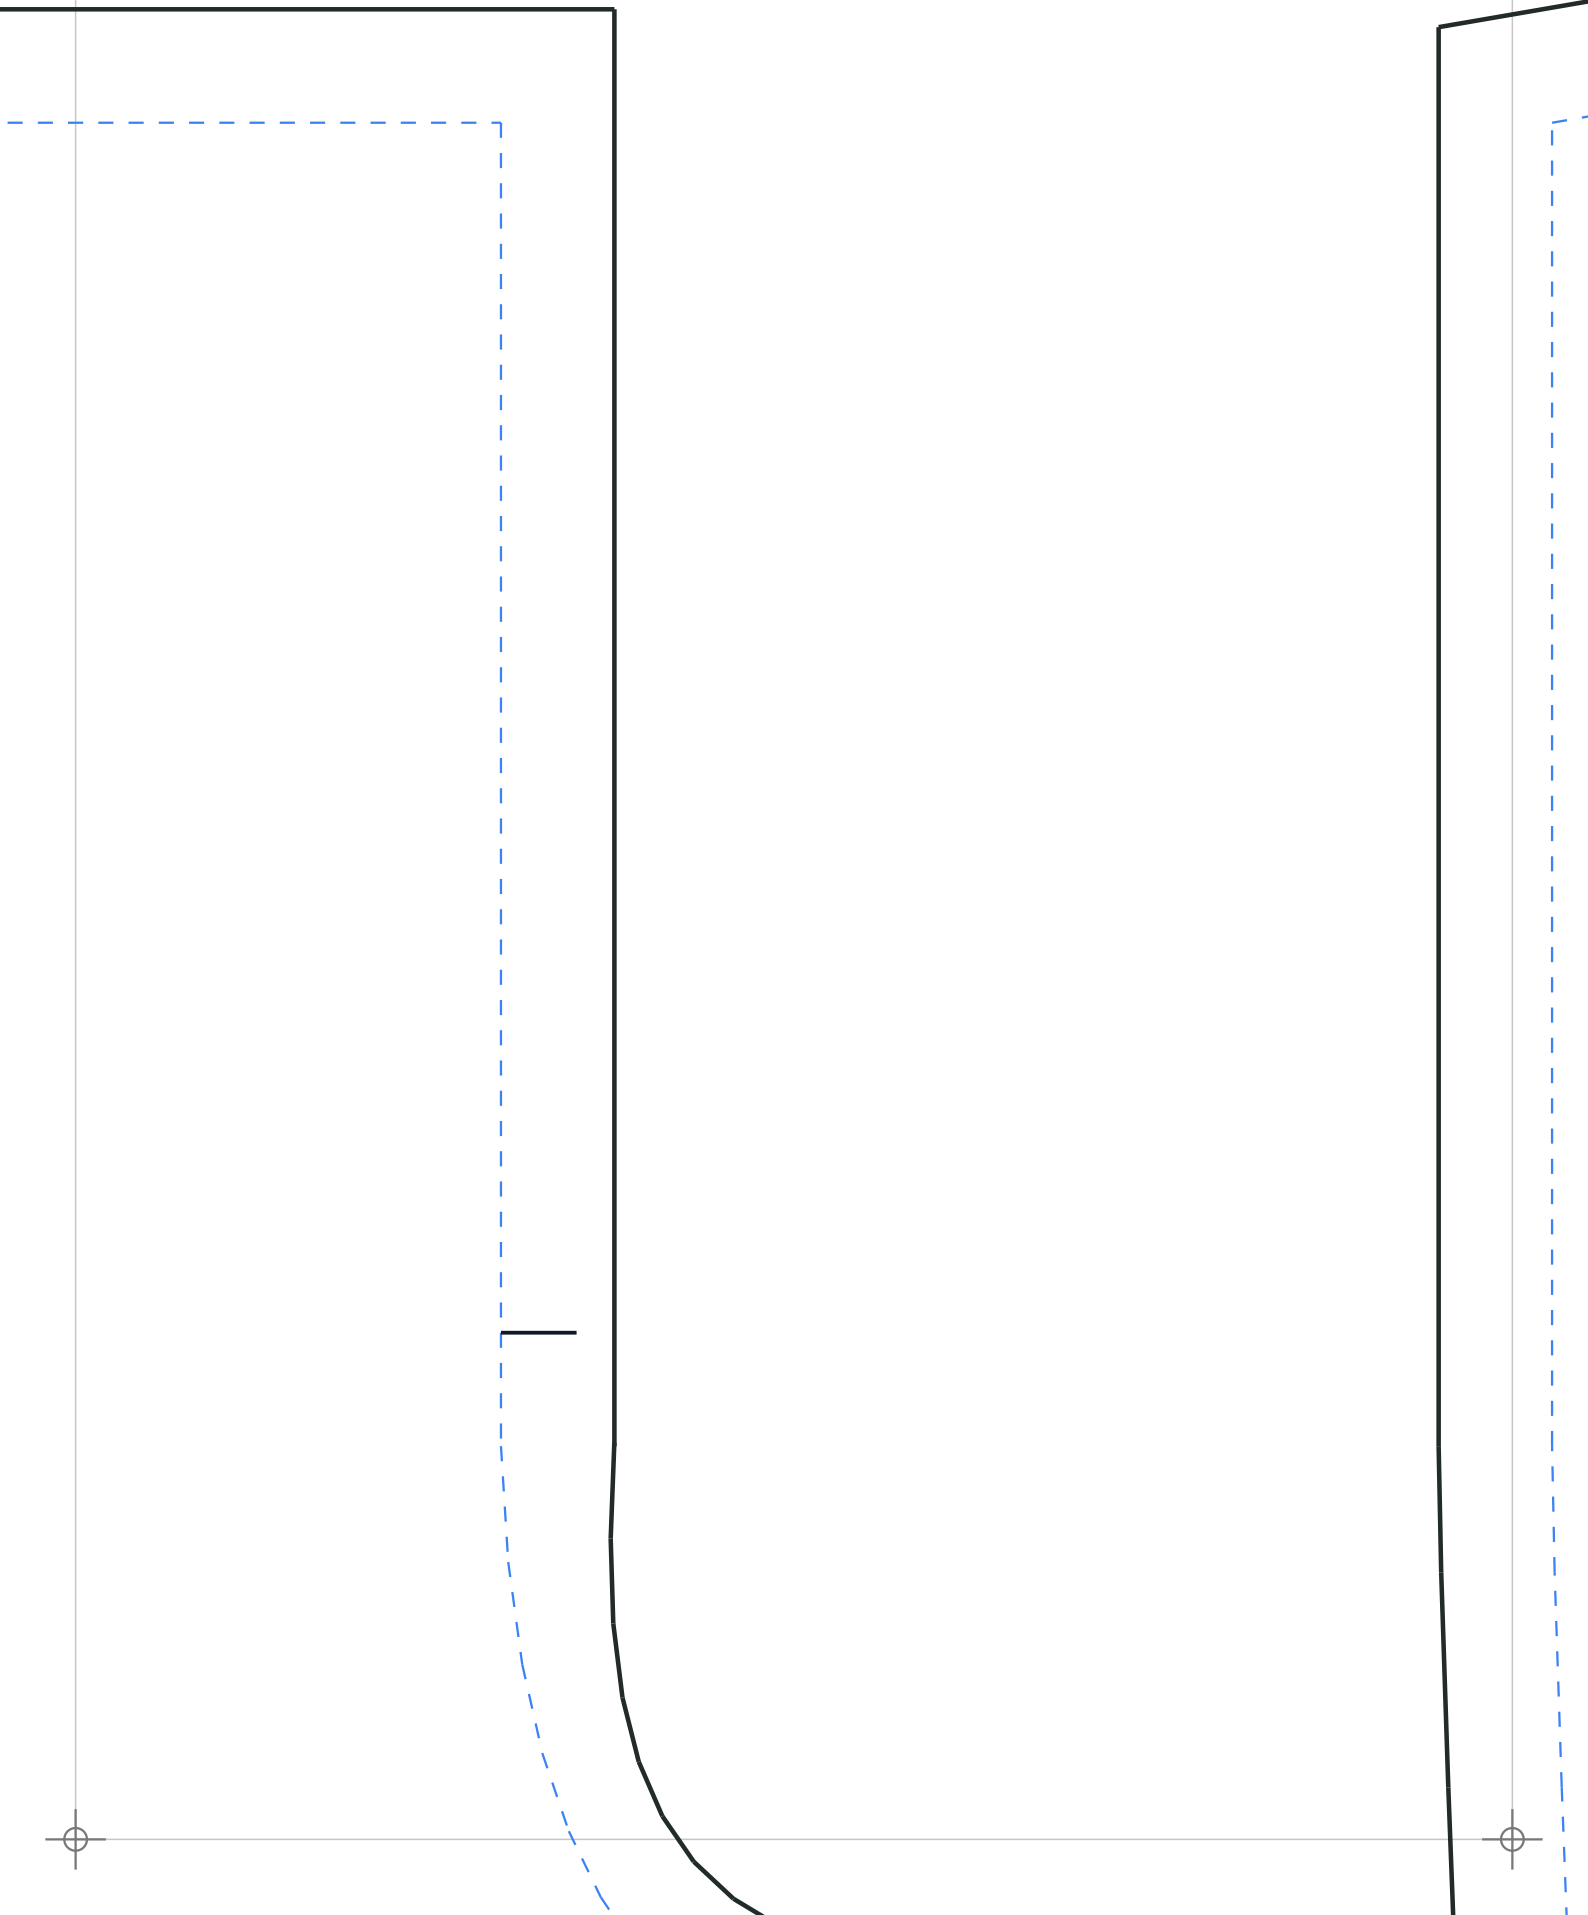

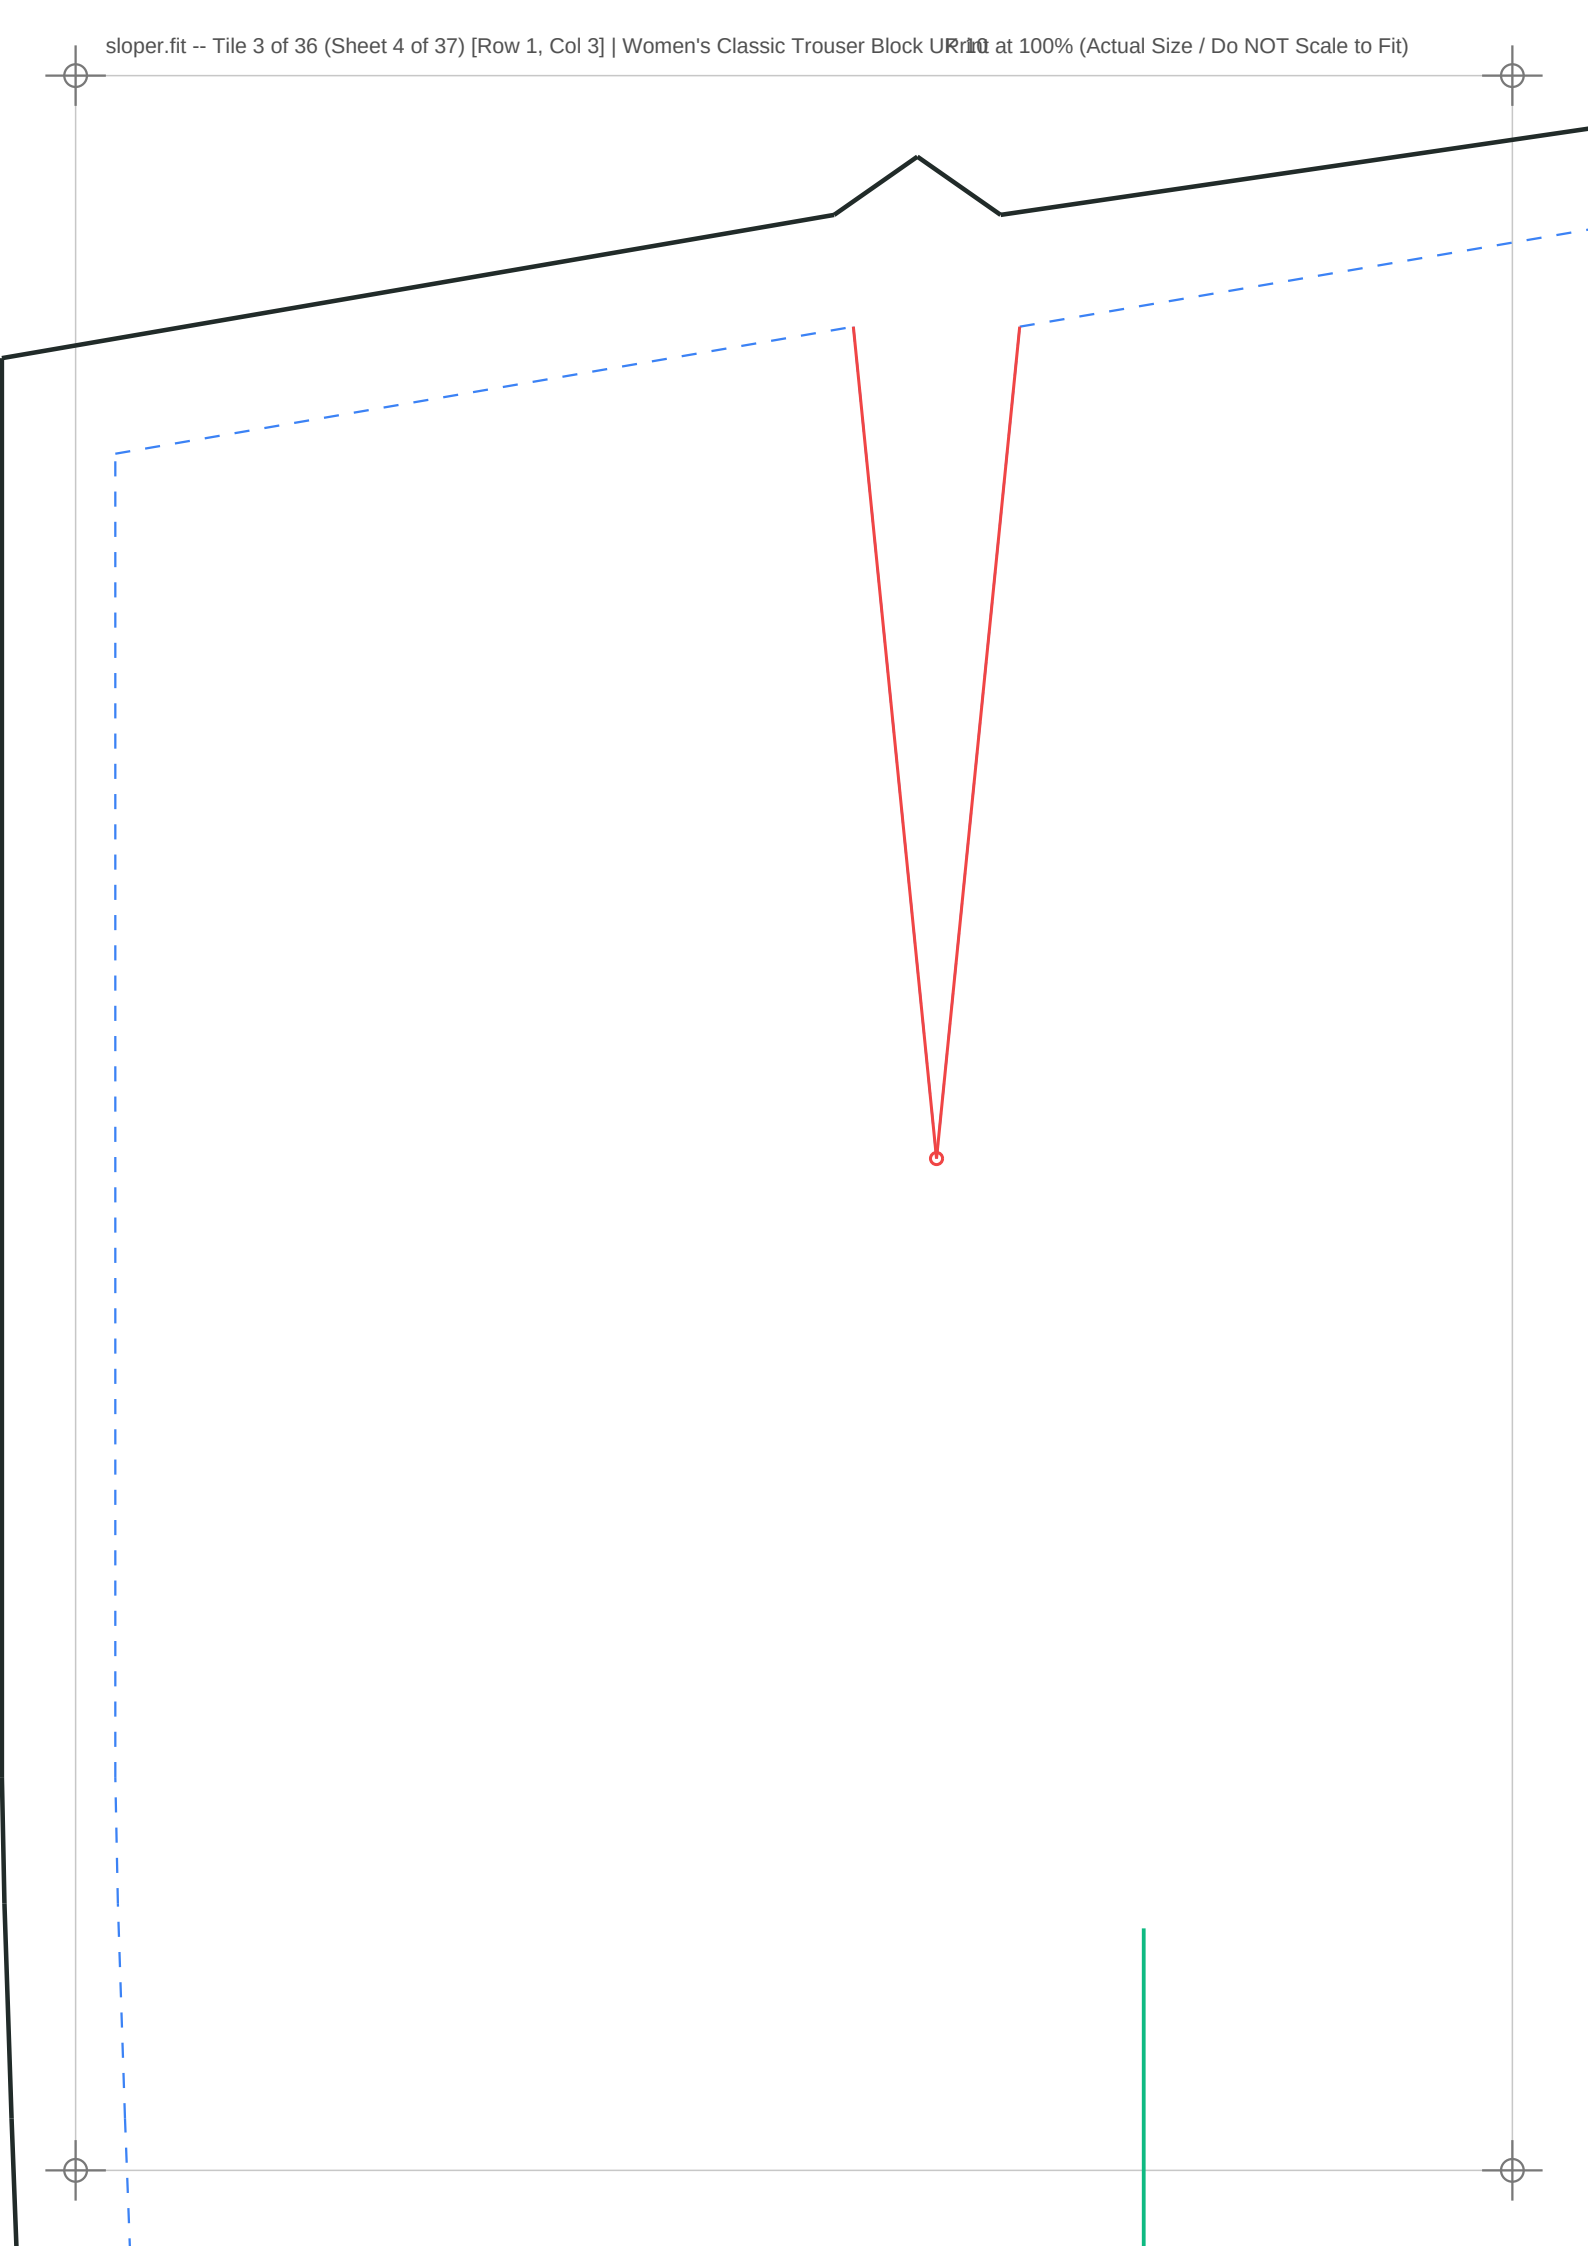

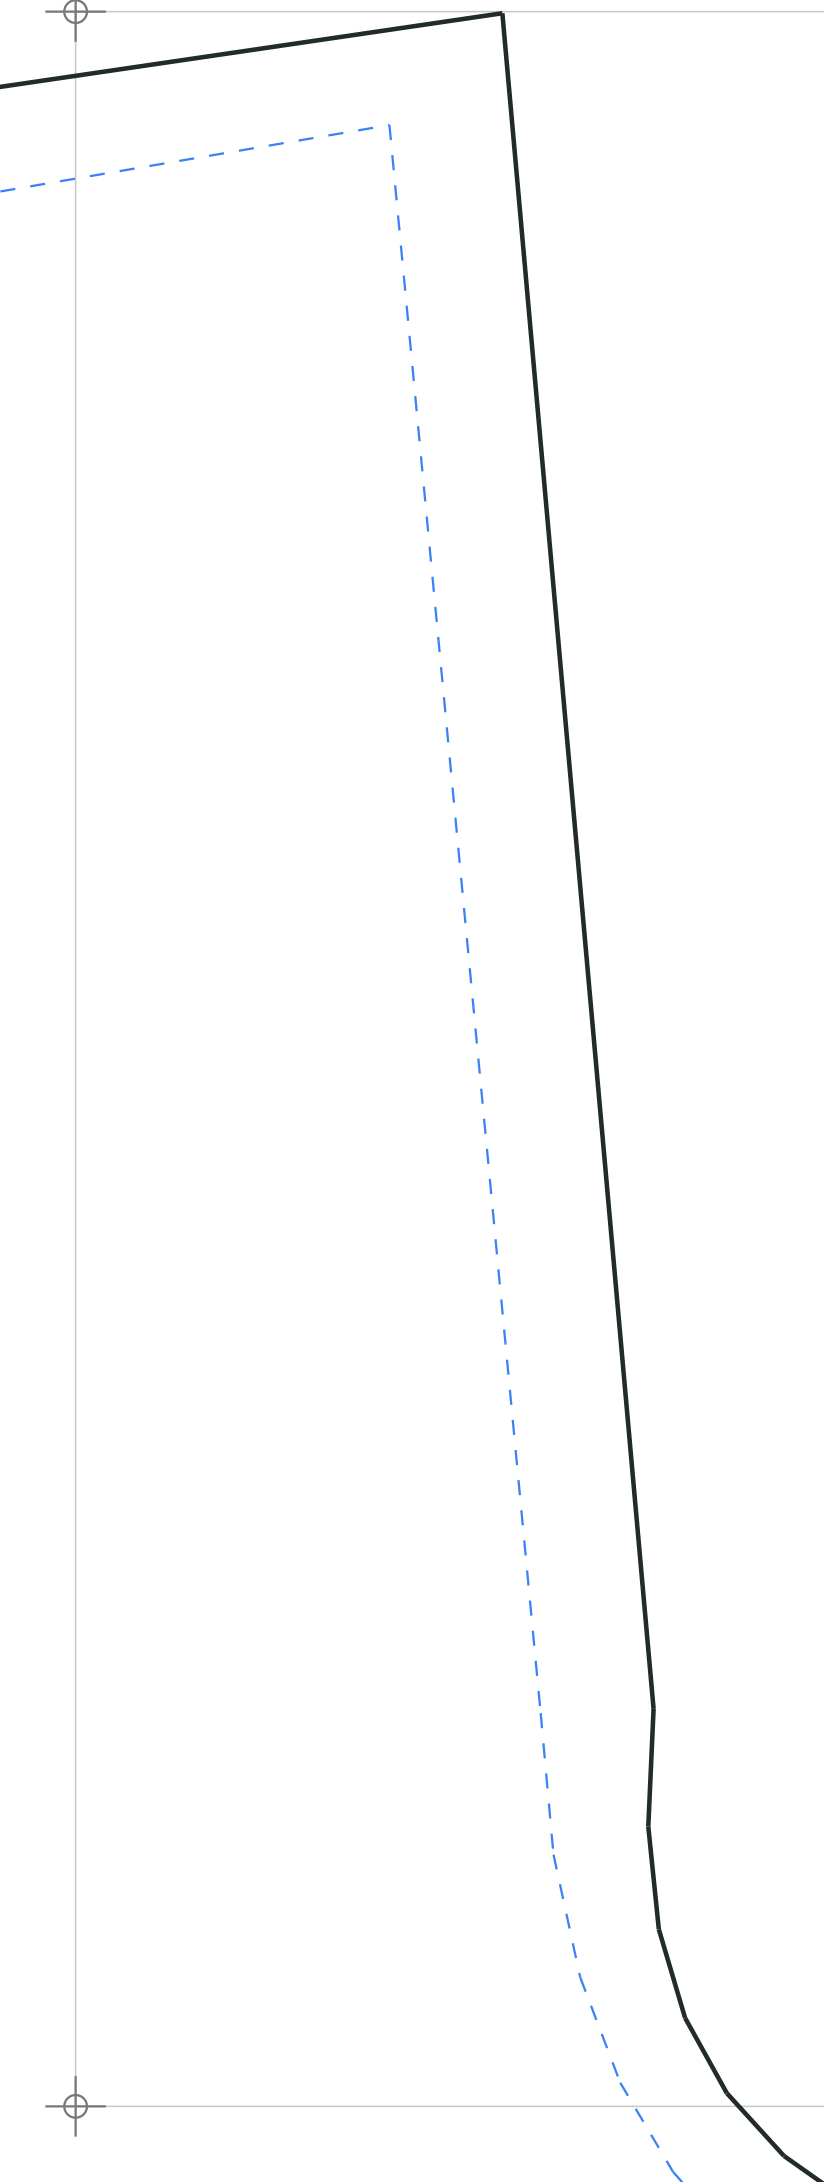

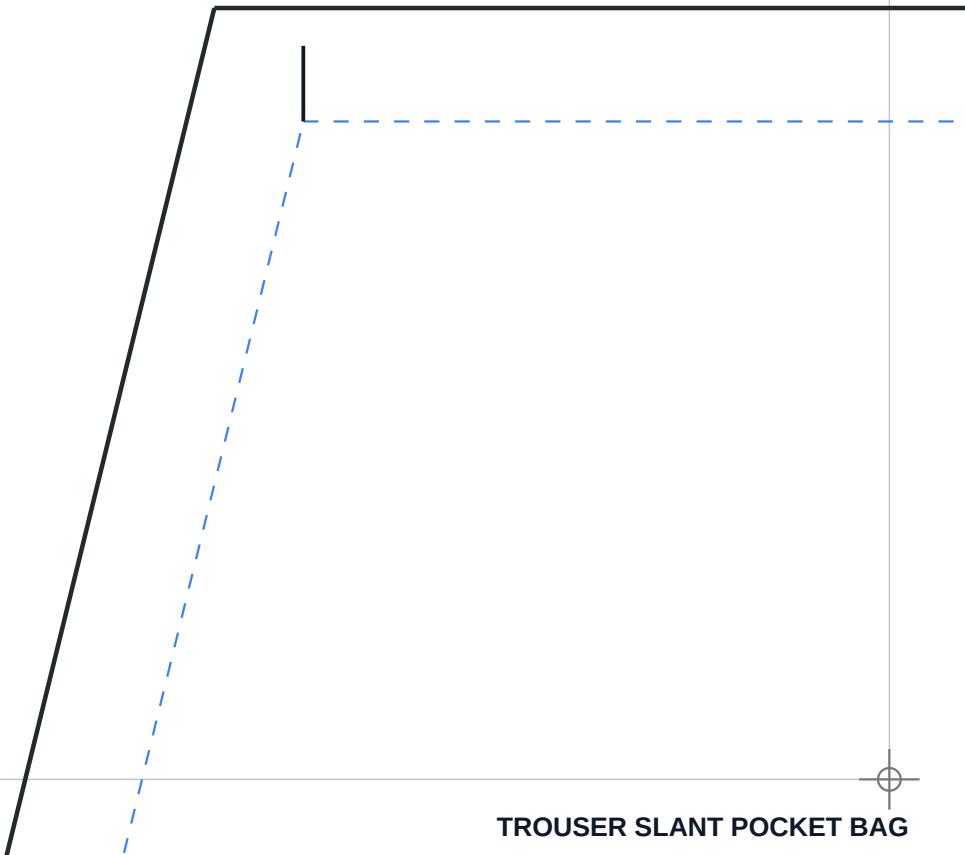

TROUSER SLANT POCKET BAG

ST
CUT :
Fo



CUT 1 PAIR (Left &


STRAIGHT FOLDED WAISTBAND

CUT 1 + 1 INTERFACING | Self Fabric + Interfacing

Fold lengthwise along center line | Interface outer half

+15mm Seam Allowance



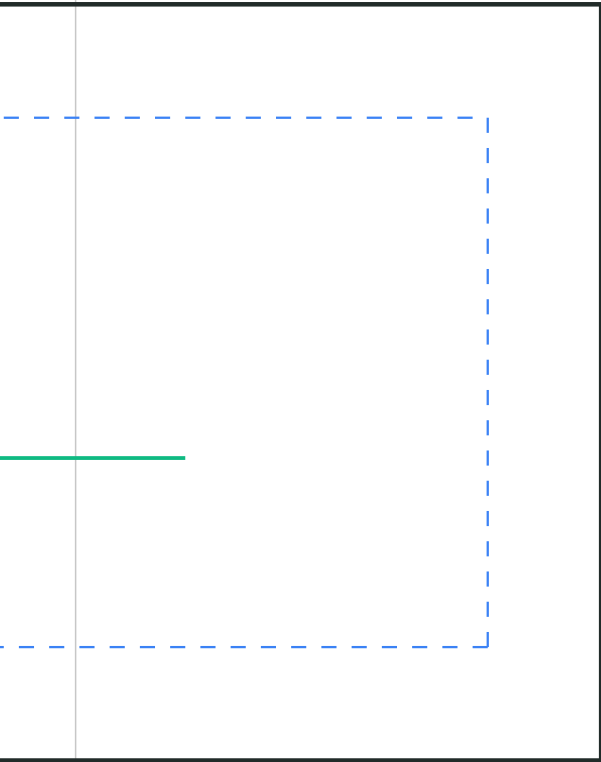

TROUSER FRONT LEG


CUT 1 PAIR (Left & Right) | Place on folded fabric. | Self Fabric

Cut 2 mirrored plies through folded fabric | Do NOT cut on fold line

+15mm Seam Allowance

Fabric: Self

Print on fold line

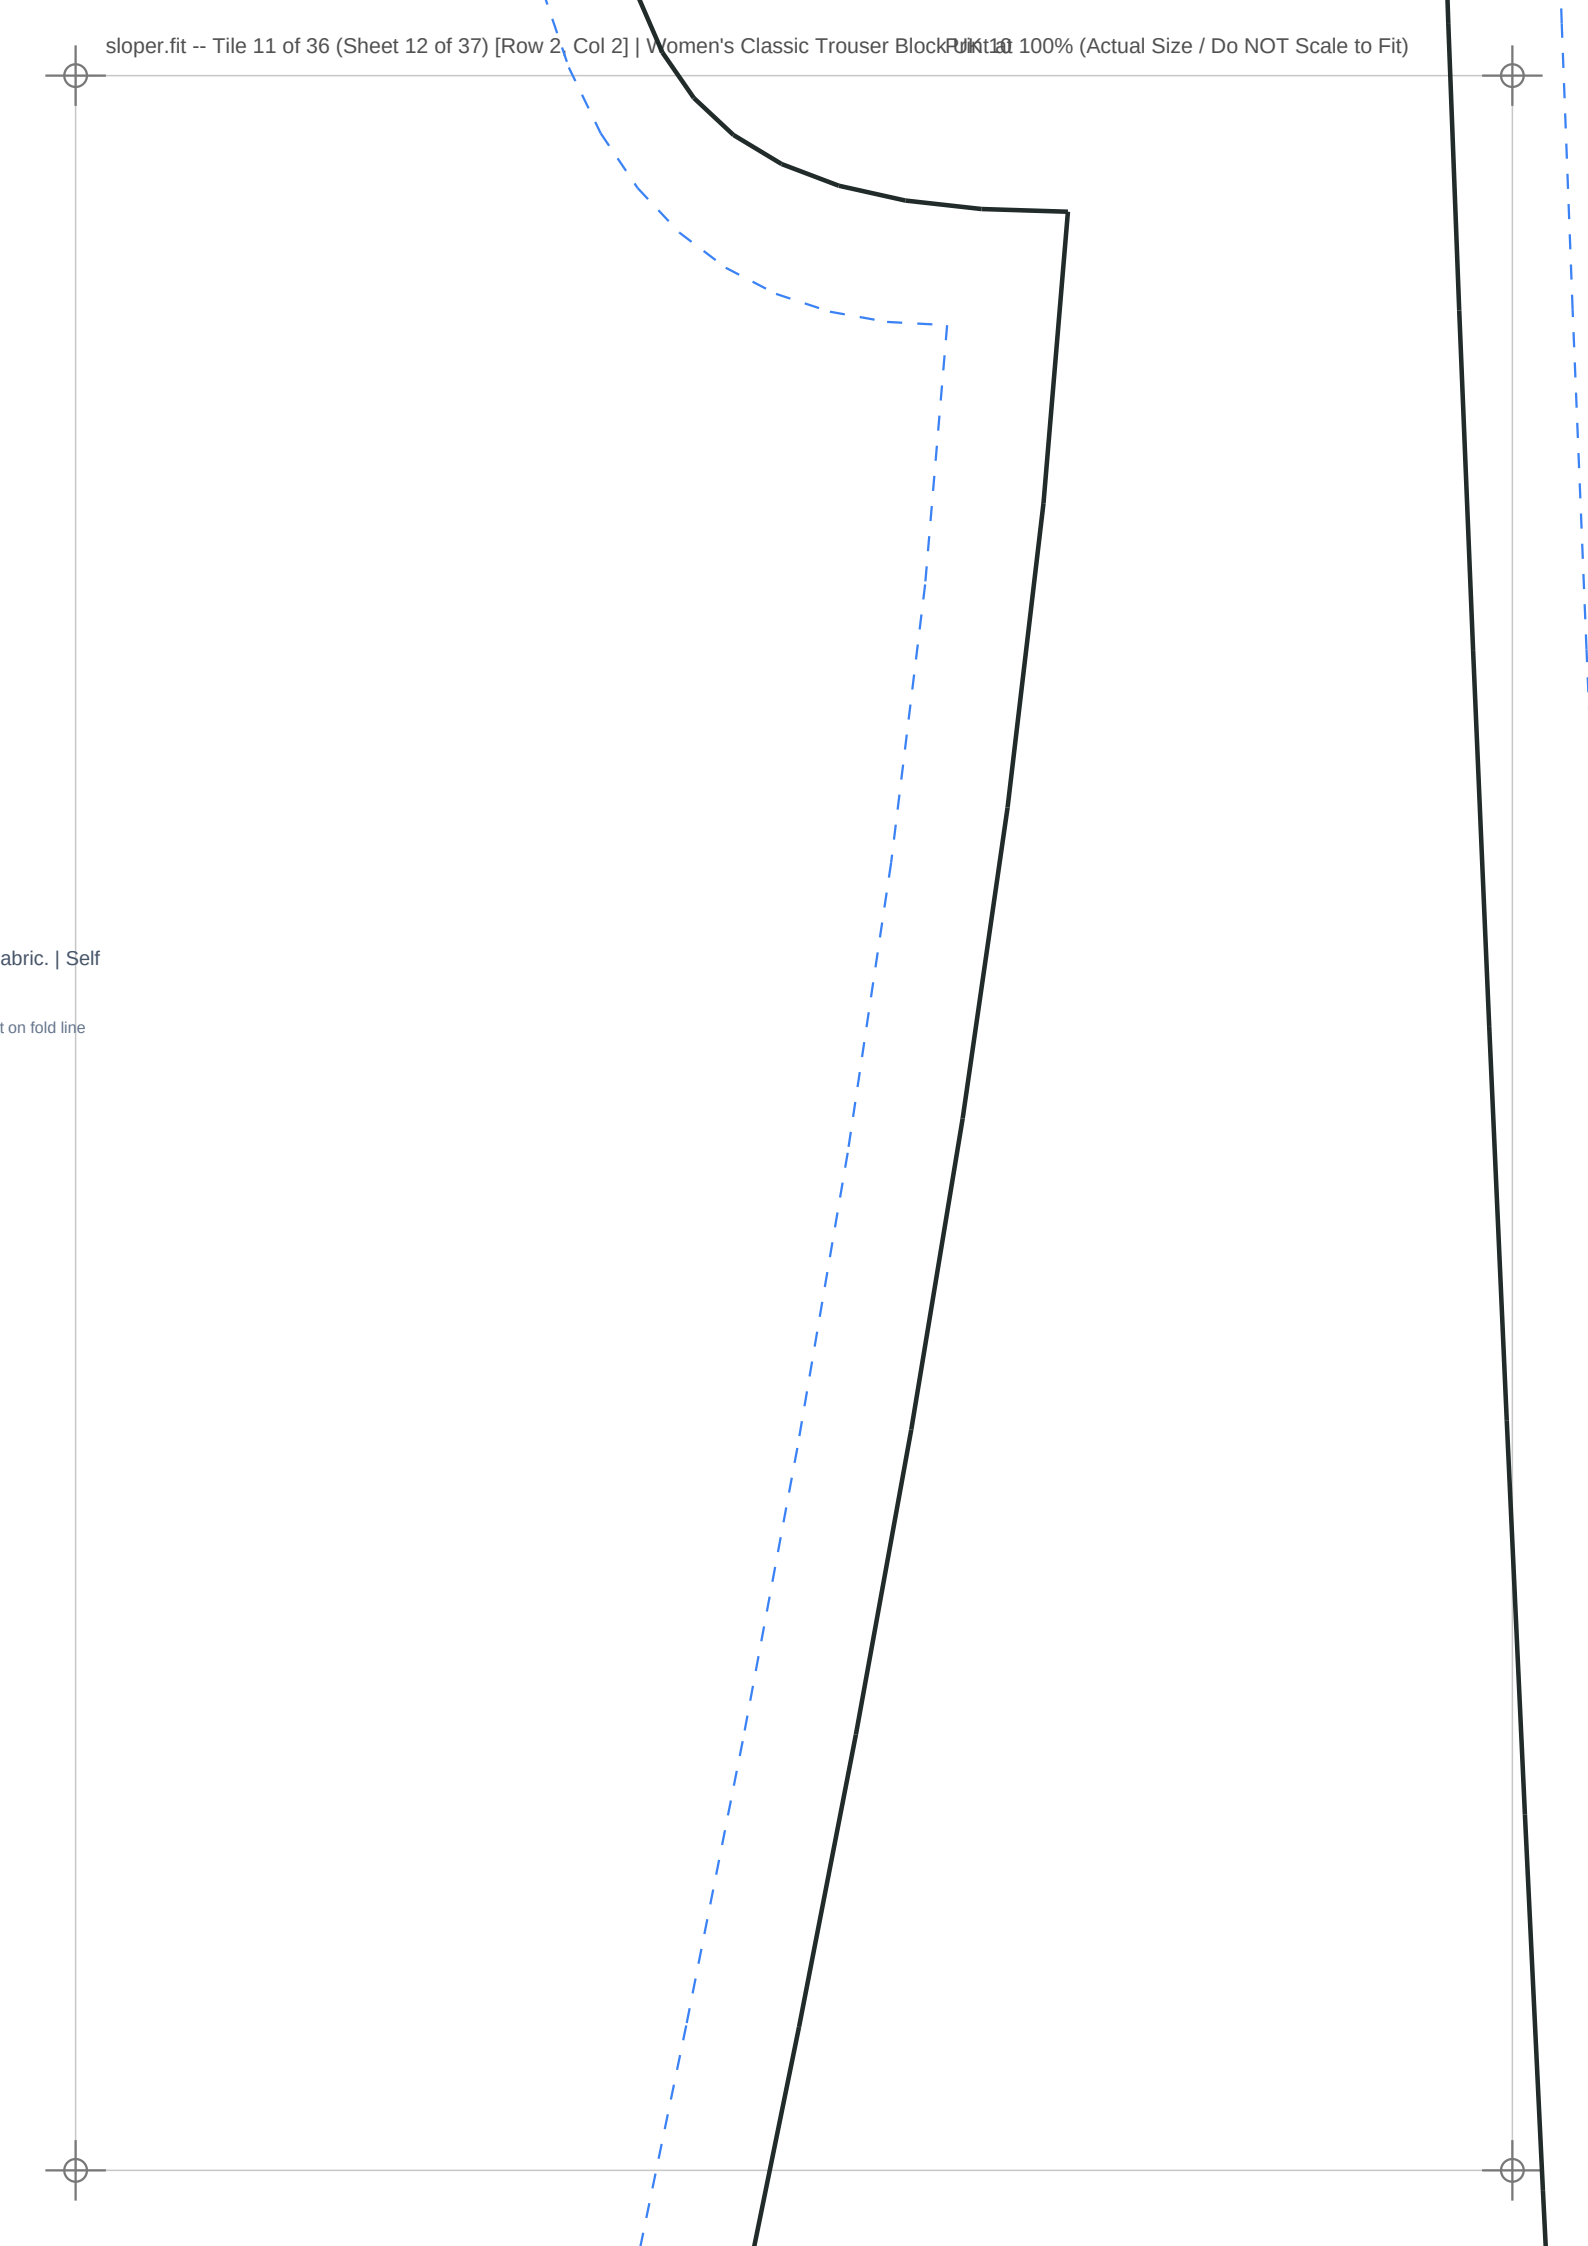

TROUSER BACK LEG

CUT 1 PAIR (Left & Right) | Place on folded fabric. | S

Cut 2 mirrored plies through folded fabric | Do NOT cut on fo


+15mm Seam Allowance

BACK LEG

on folded fabric. | Self Fabric

ic | Do NOT cut on fold line

owance

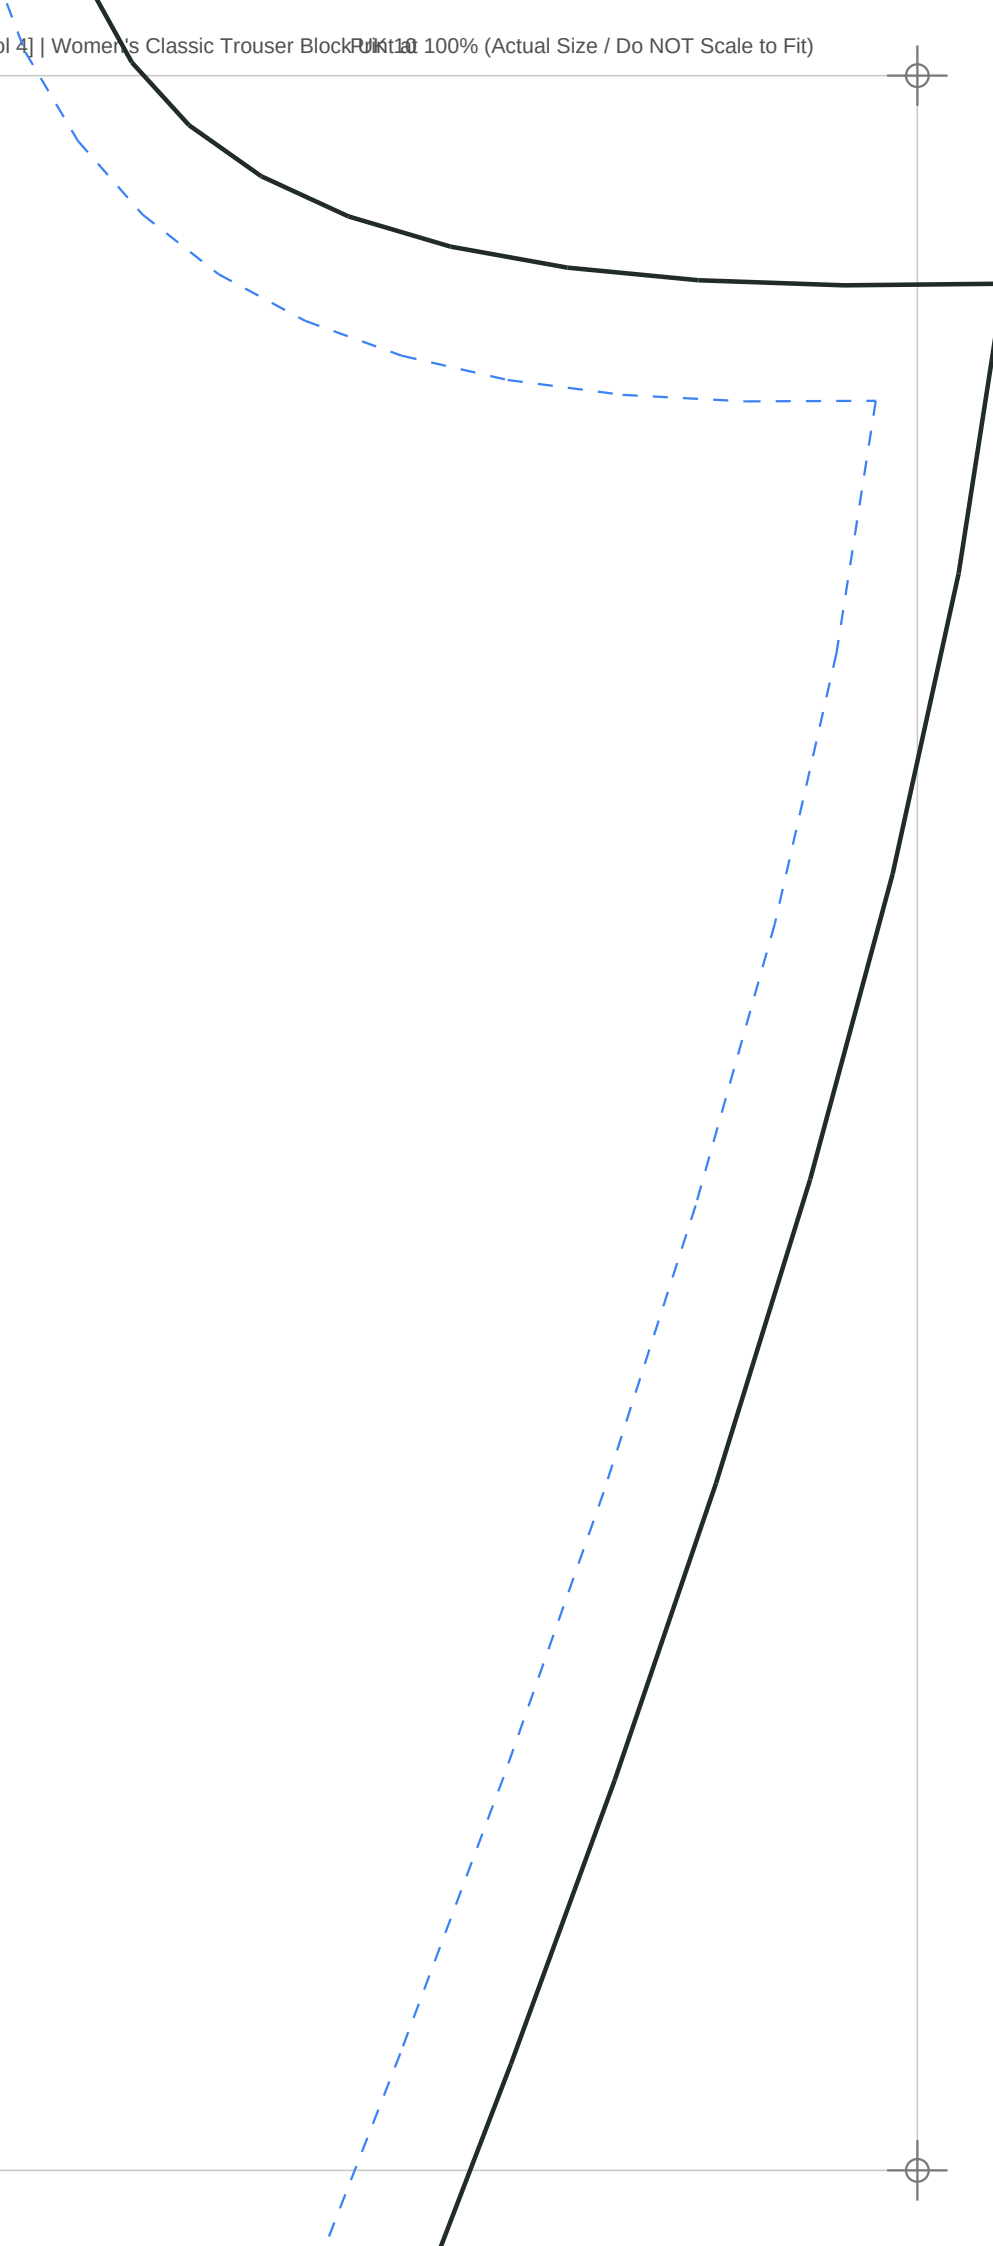

TROUSER SLANT POCKET BAG

CUT 1 PAIR (Left & Right) | Place
on folded fabric. | Lining /
Pocketing Fabric

Pocket lining | Cut 2 mirrored plies
through folded fabric

+15mm Seam Allowance

GRAINLINE

POCKET BAG

Place

CS

TROUSER POCKET
FACING BEARER

CUT 1 PAIR (Left &
Right) | Place on
folded fabric. | Self
Fabric

Self fabric | Cut 2
mirrored plies through
folded fabric

+15mm Seam Allowance

GRAINLINE


TROUSER
J-FLY
SHIELD
GUARD


GRAINLINE


CUT 1 + 1
INTERFACING |
Self Fabric +
Interfacing


Self fabric | Fly
zipper underlay
guard


+15mm Seam Allowance

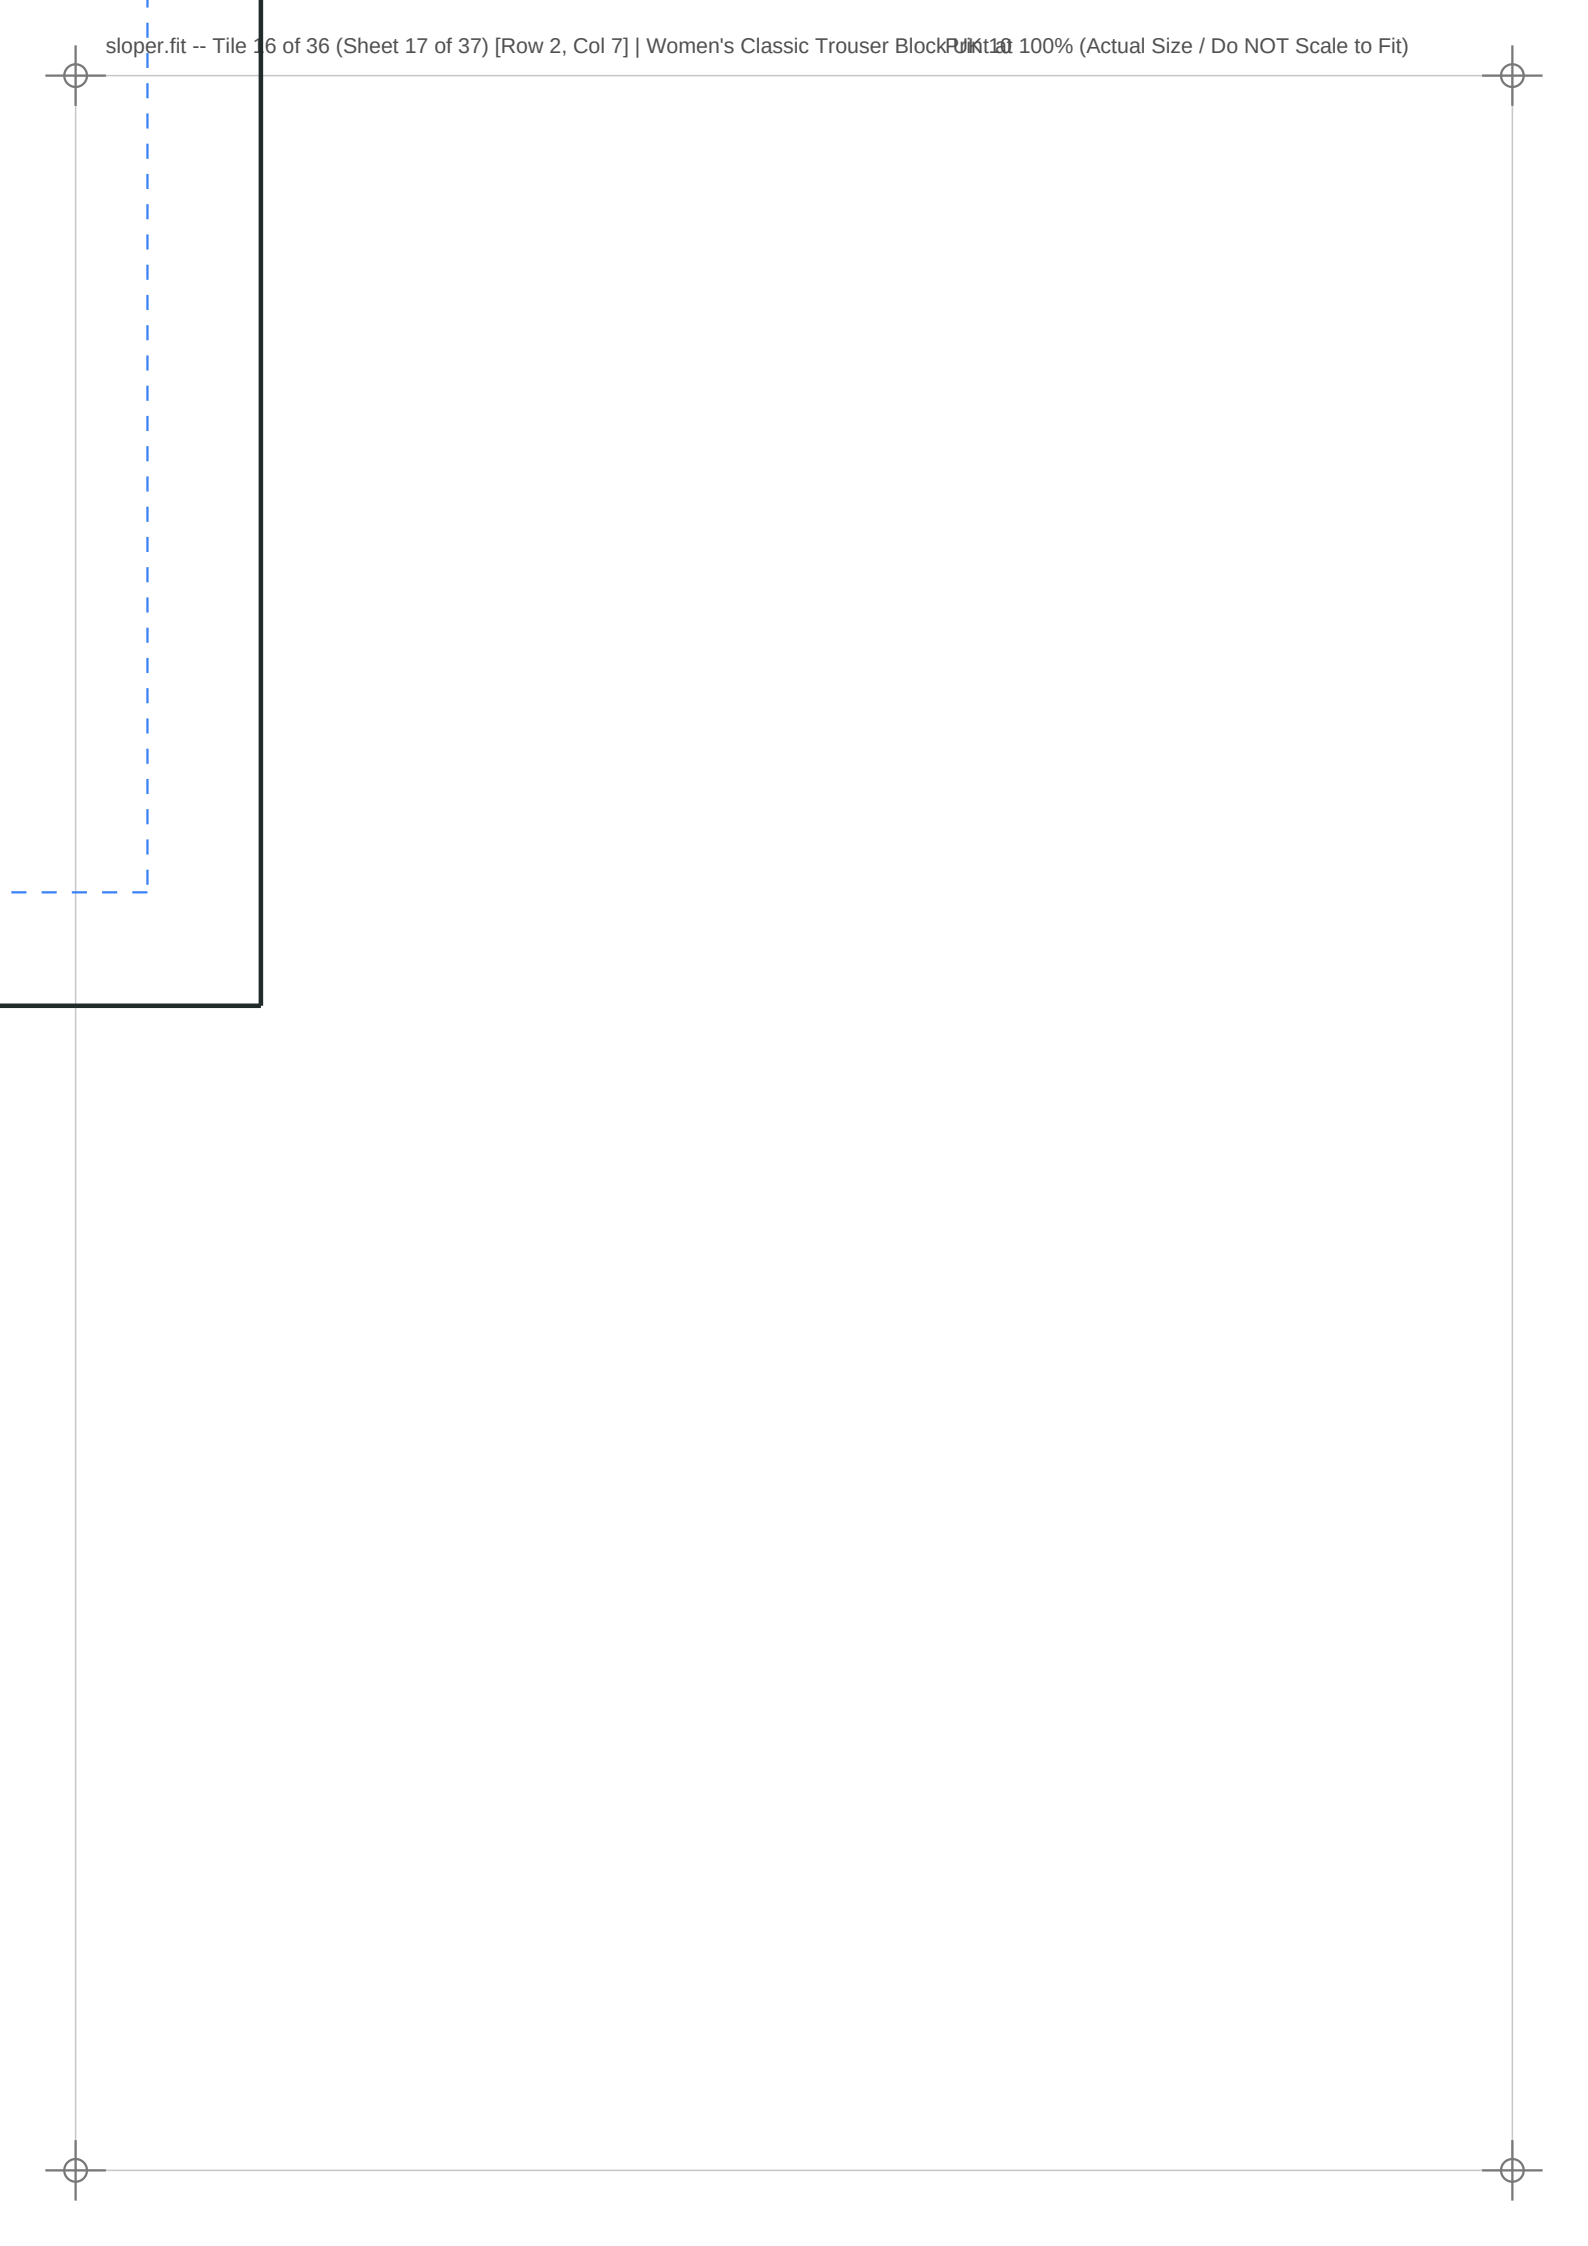








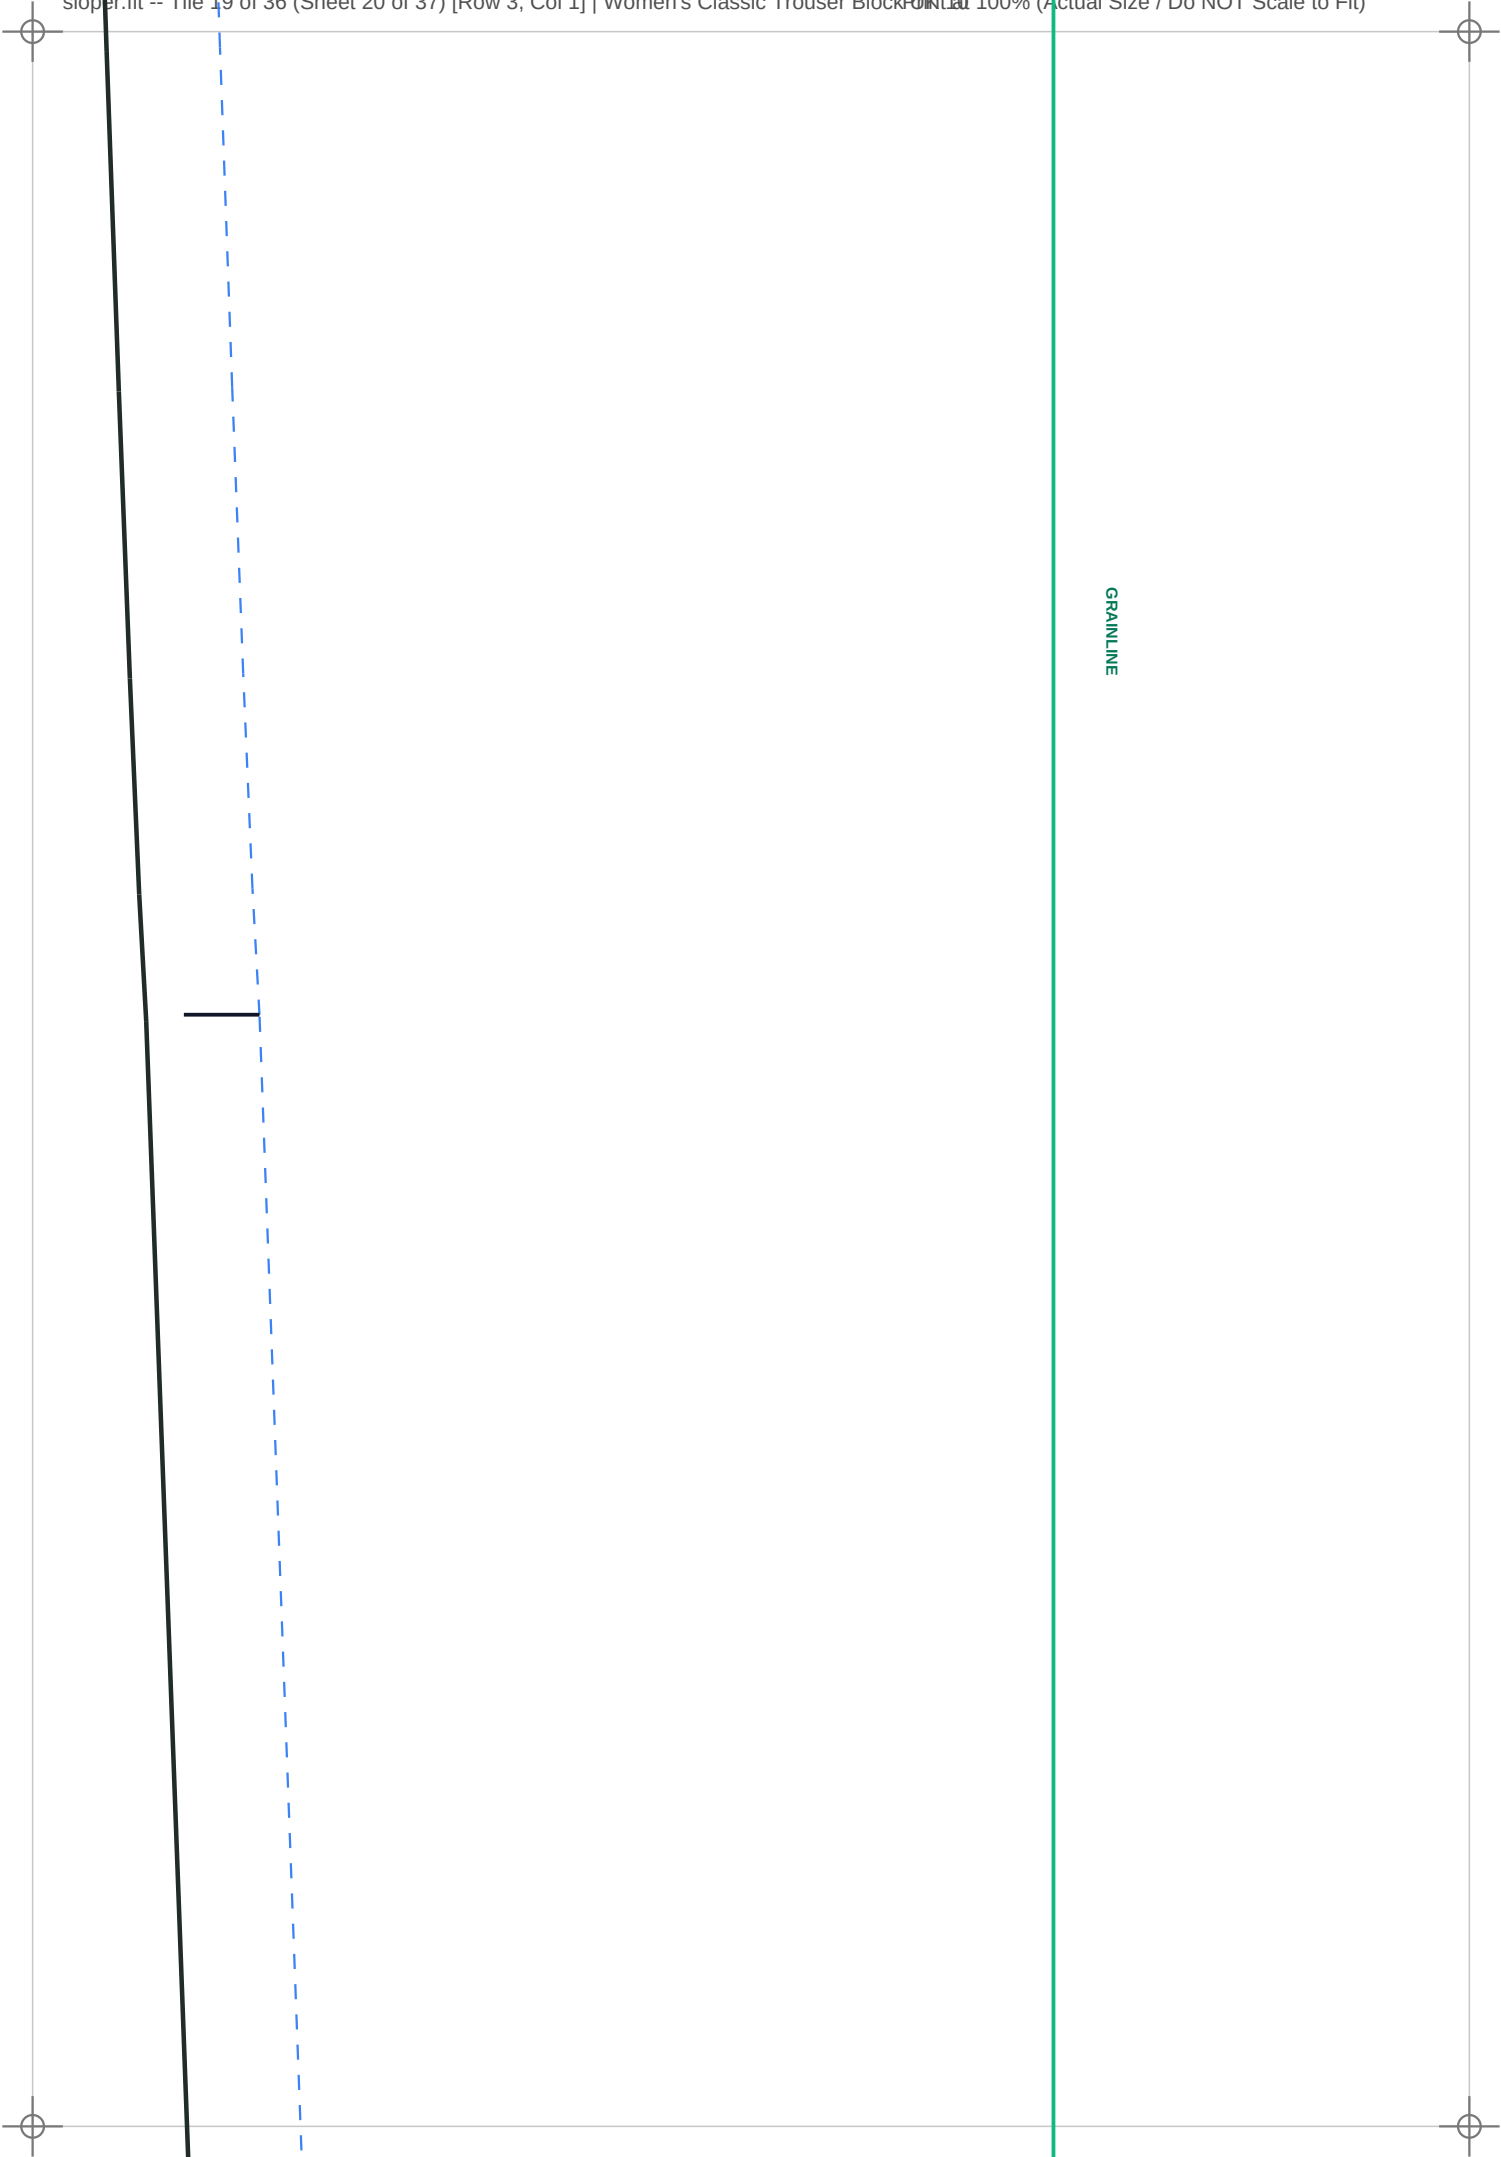

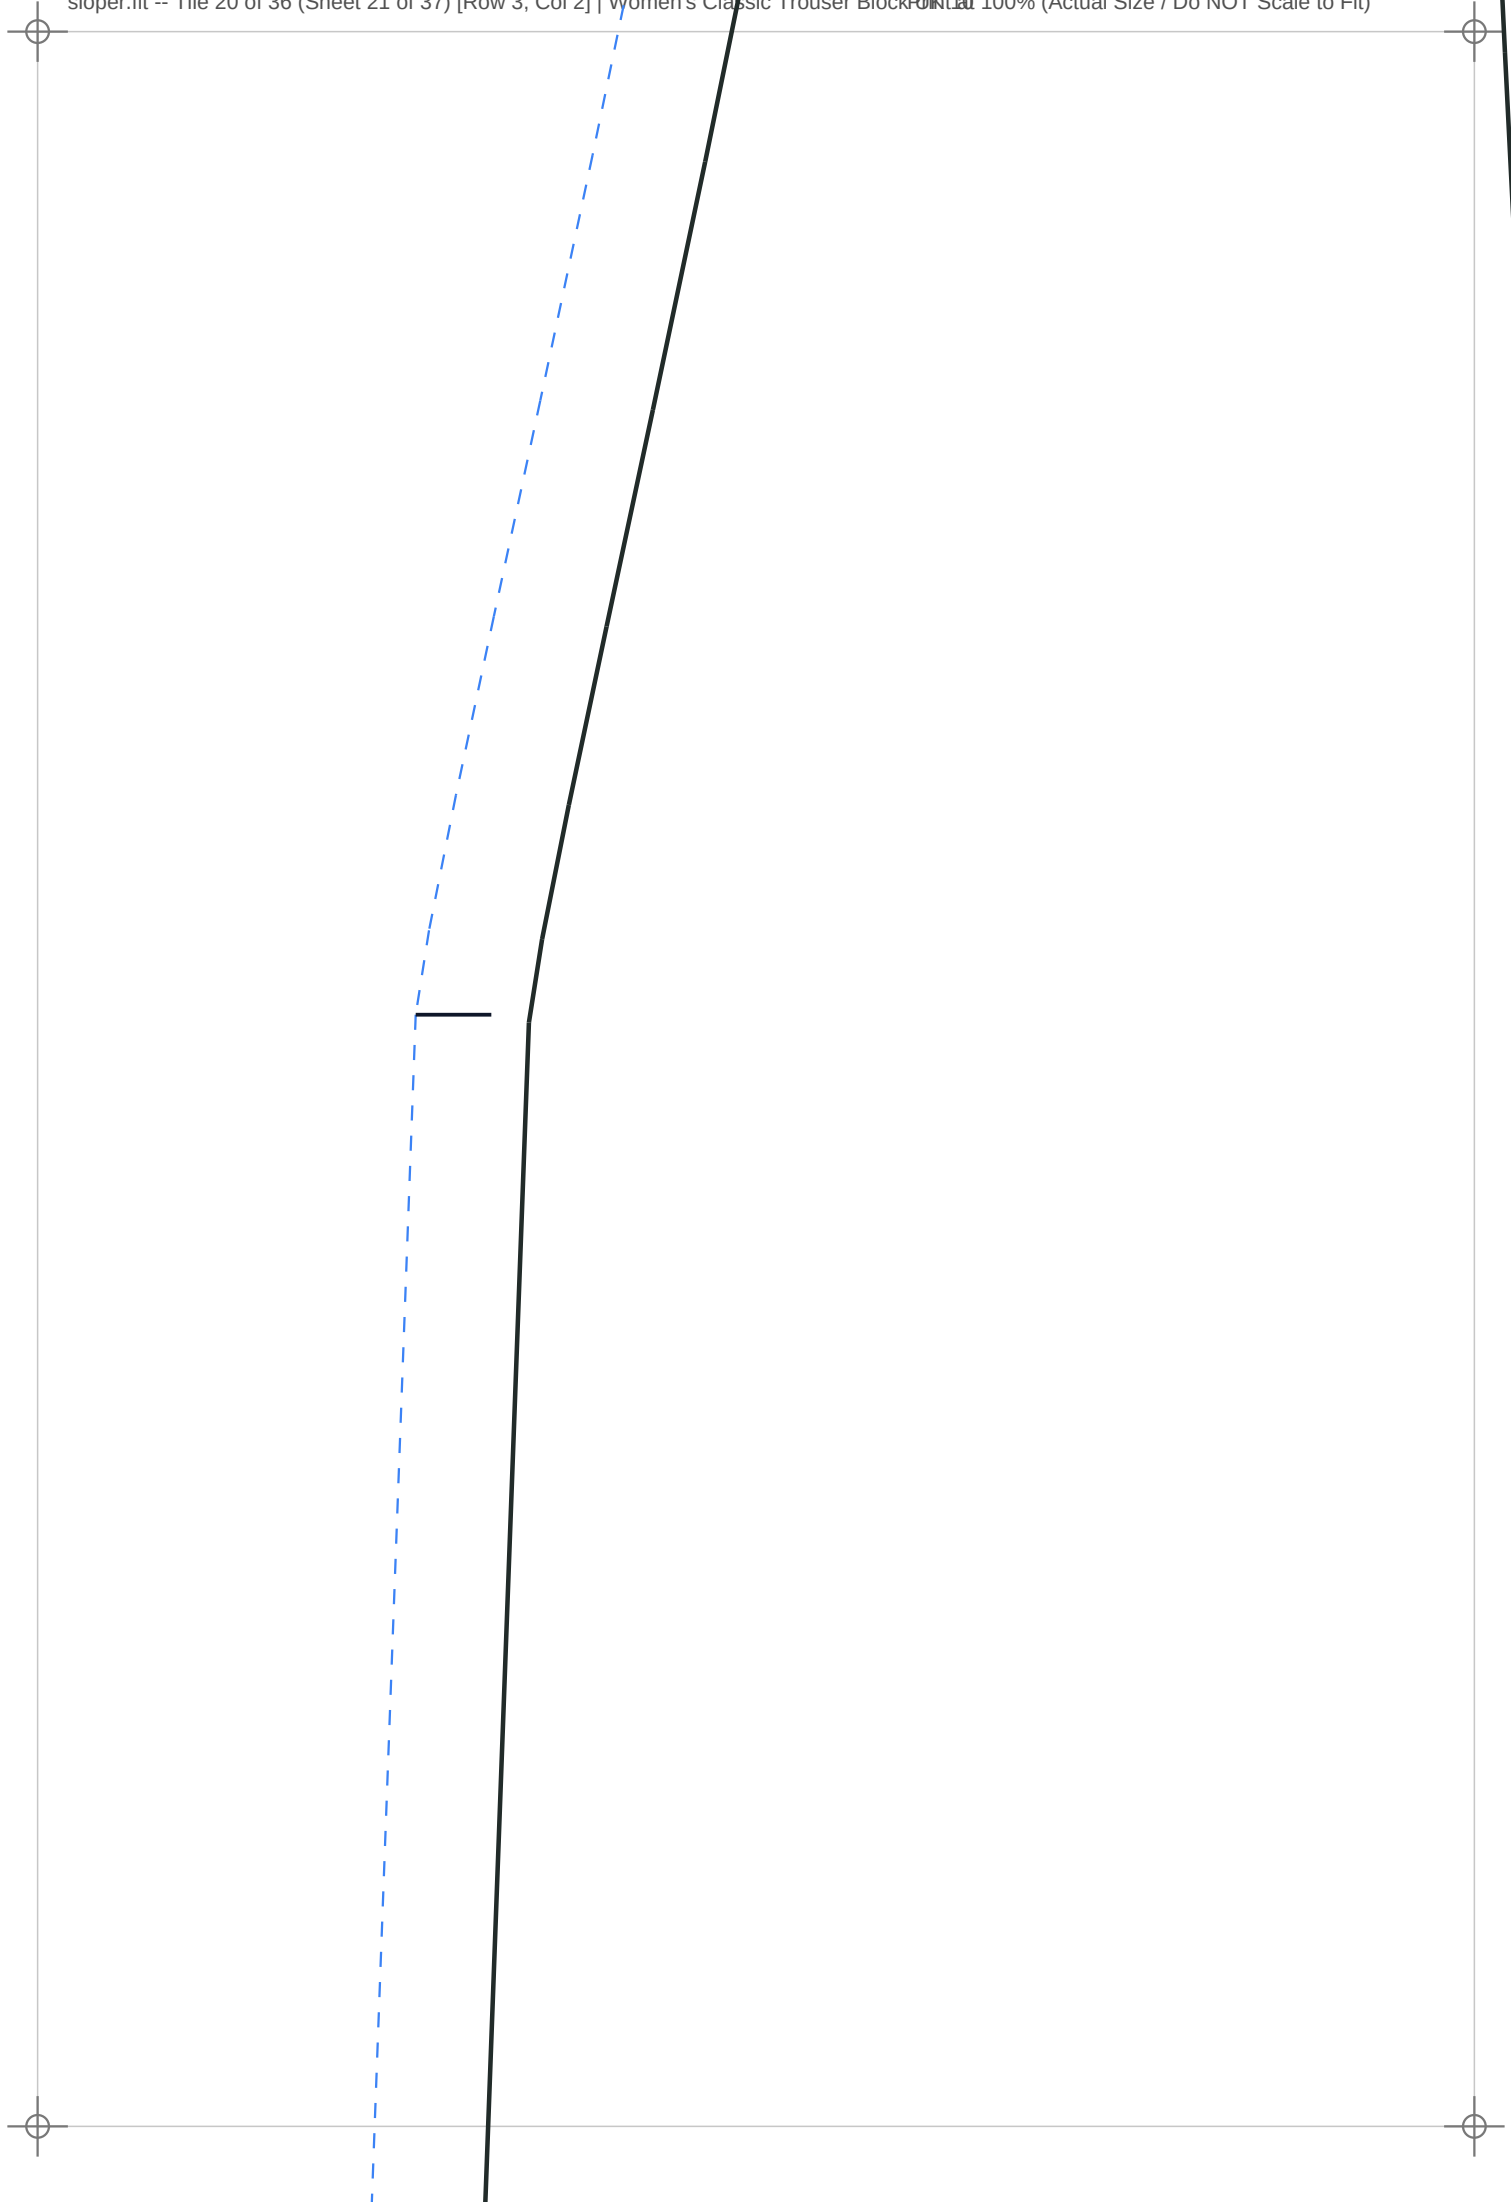

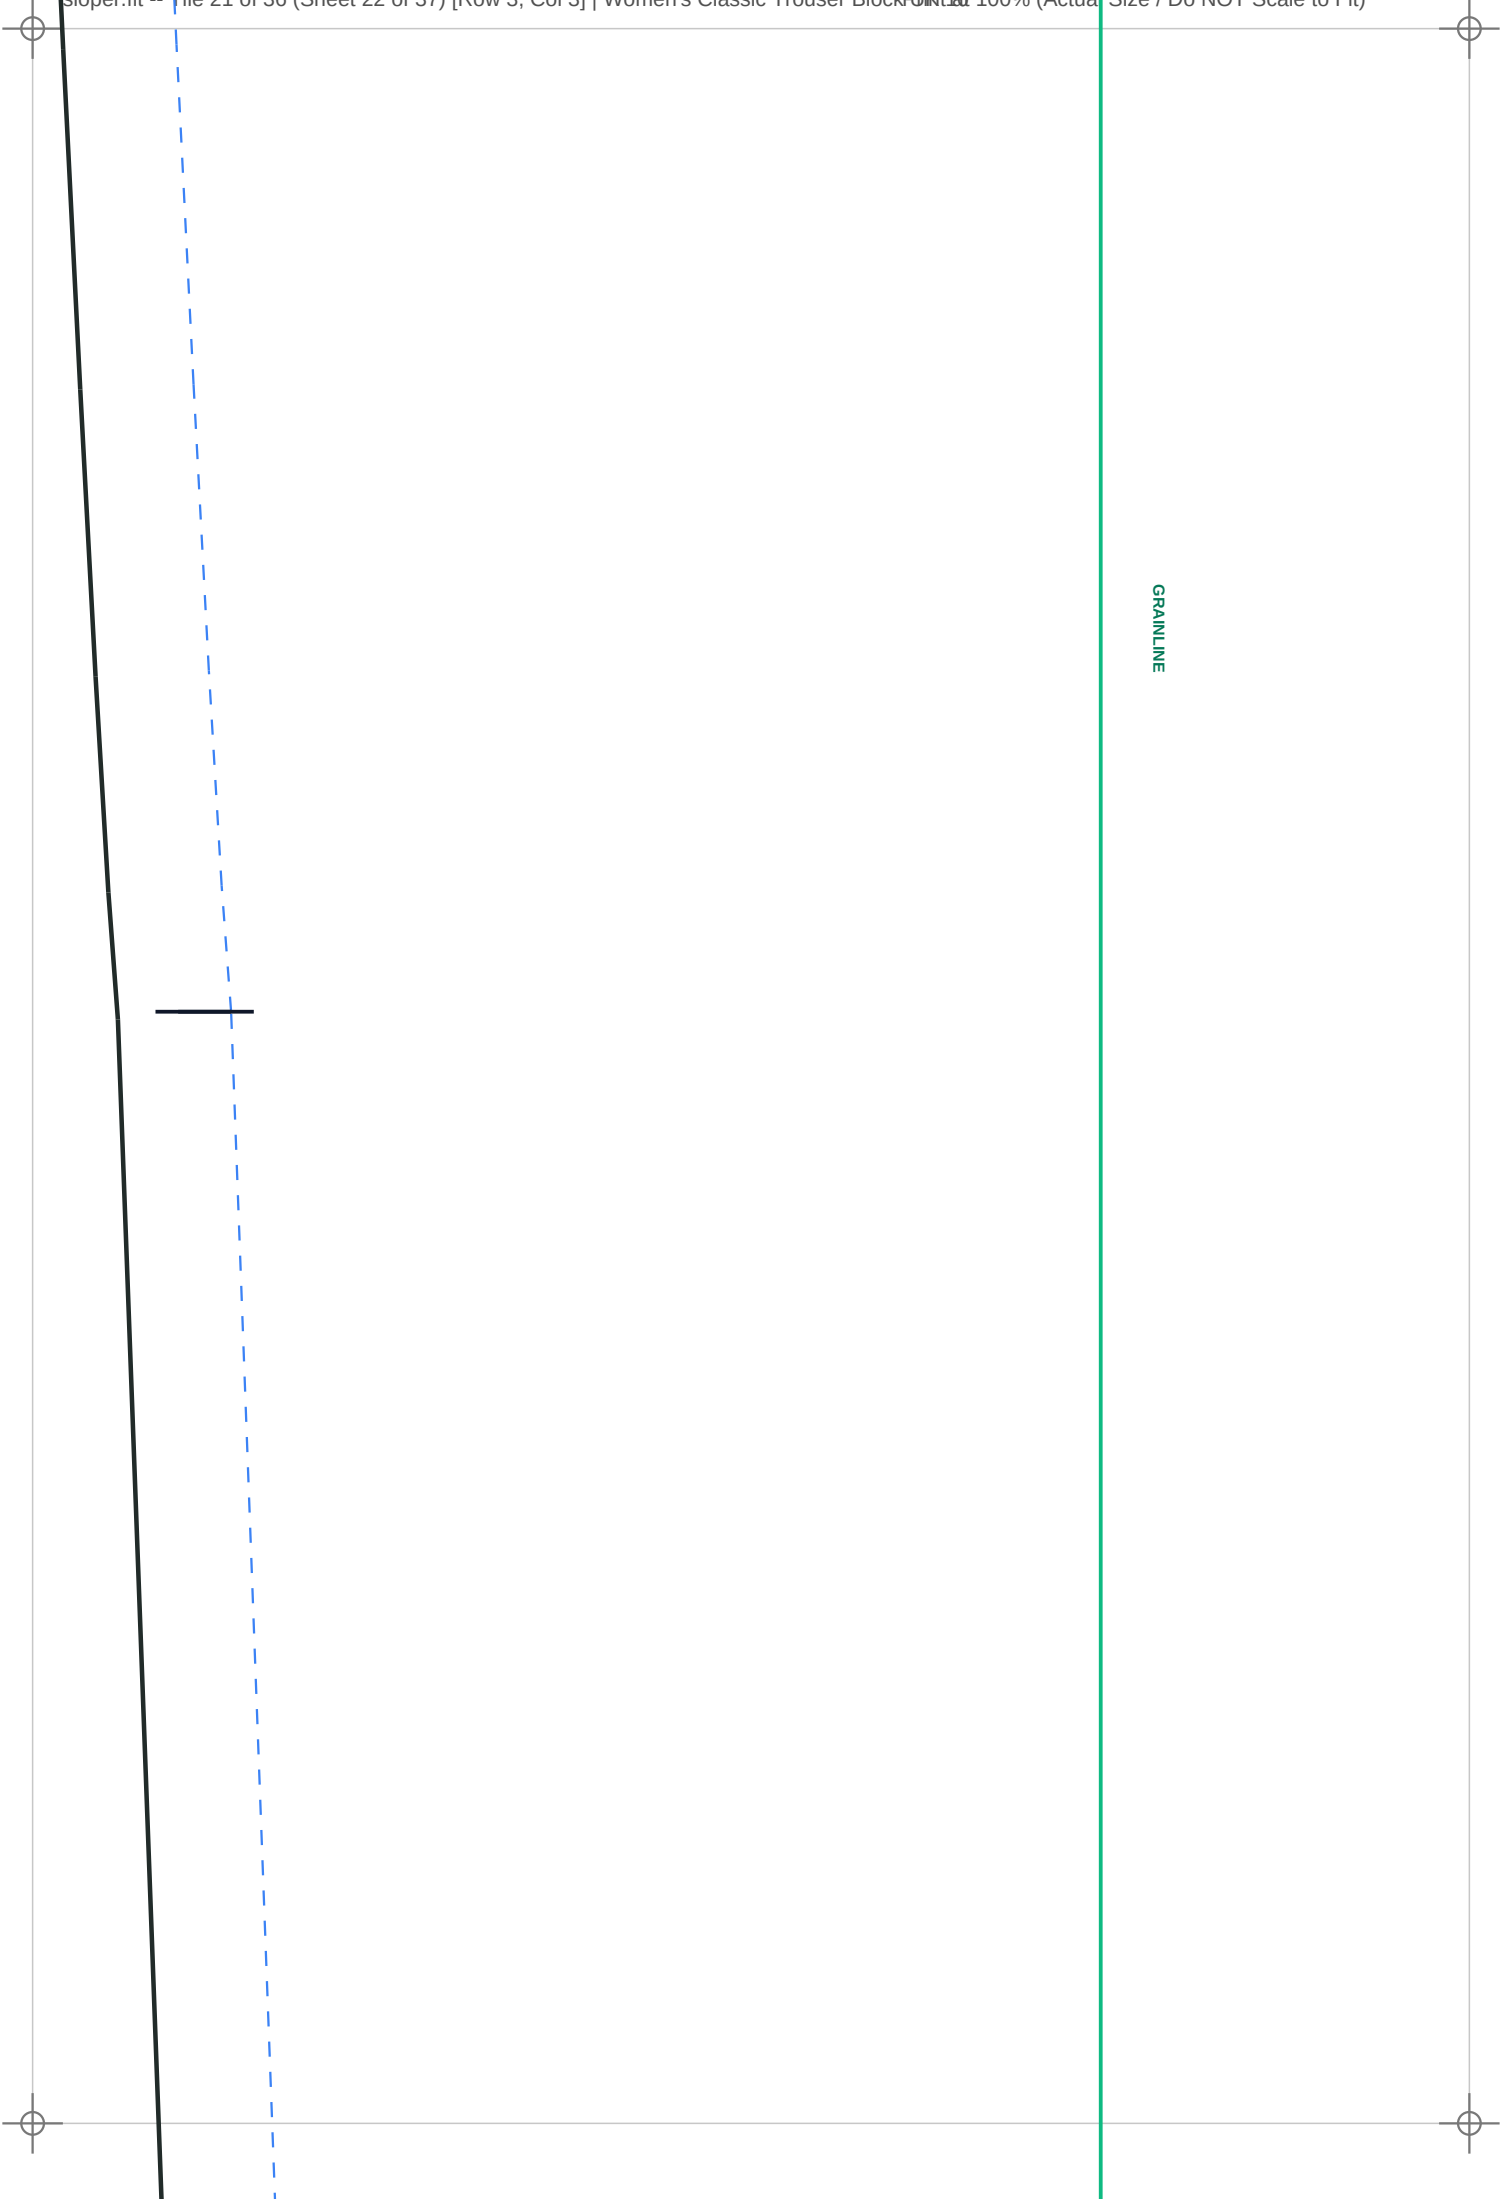

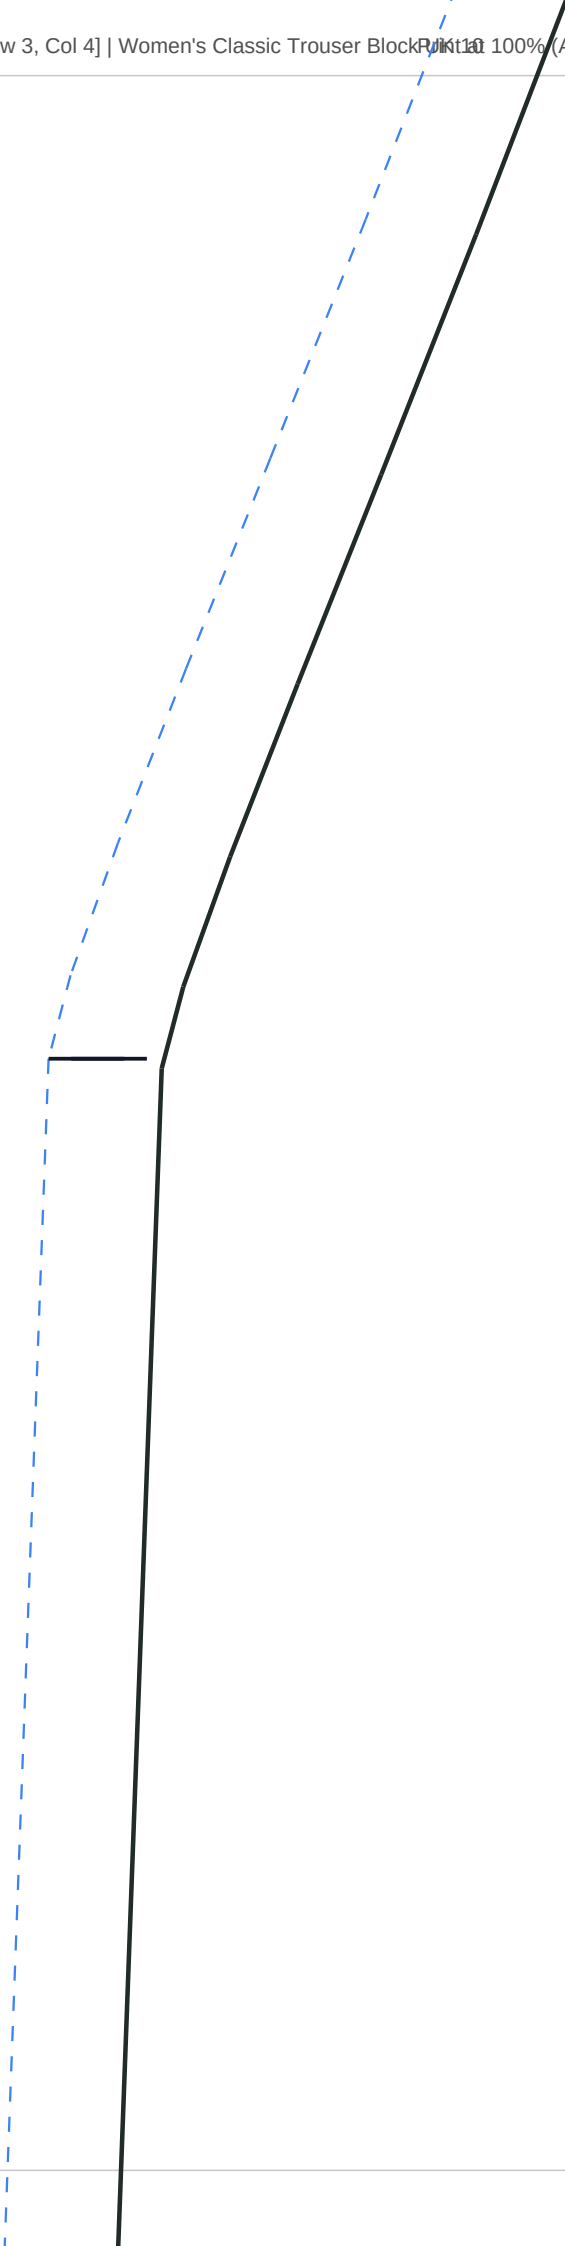



+15mm Seam Allowance

Self fabric | Fly
zipper underlay
guard

